

User Guide – CANopen protocol DAT 7130

CANopen Slave Device 8 Digital Inputs – 4 Relay Outputs

PROFILE DESCRIPTION

- EDS file:

DAT7130.eds

- Application layer:

CiA DS 301 Version 4.02


- Device Profile:

CiA DS 401 Version 3.0.0

- Transmit PDO supported :4

- Receive PDO supported: 1

DIP-SWITCH CONFIGURATION

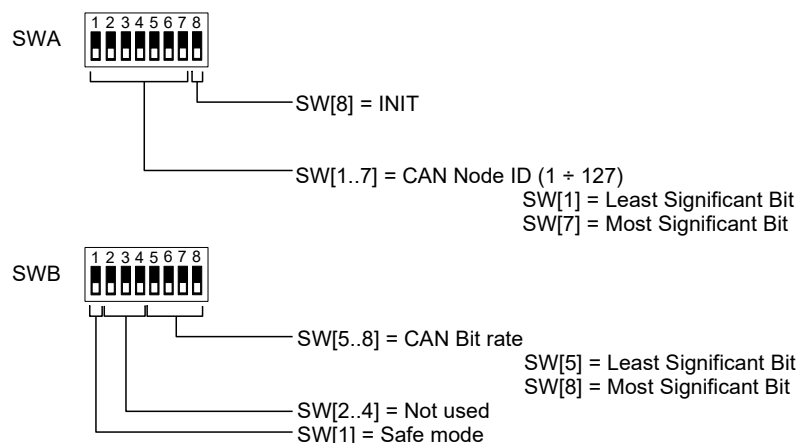

THE OBJECT DICTIONARY (OD)

The Object Dictionary is the part of the device profile wherein are grouped the objects that have an influence on the device behaviour (application objects, communication objects and state objects). The structure of the Object Dictionary is predefined as in Draft Standard CiA301.

How to read the Object Dictionary table present in this document.

Index	N° Sub-index	Name	Description	Object type	Default value	Access
-------	--------------	------	-------------	-------------	---------------	--------

Index: 16 bit number expressed in Hex format used to address the object inside the OD;

Sub-index: 8 bit number expressed in Hex format used to indicate and address the sub parts of an object;

Name: Defines which is the name of the object inside the OD;

Description: Text strings that describe what is the function of the object;

Object type: Indicates what is the data type of the object (Unsigned 32, Boolean, etc..).

Default value: Indicates what is the default value for an object.

Access: Indicates what is the type of access designed for an object:

RO: indicates an object that could only be read;

RW: indicates an object that could be read and written

RWW: indicates an object that could be read and written and it is mapped to the RPDO

---: indicates that the object is a complex object addressed by Sub-index.

The real time data-transfer is performed by means of the Process Data Object (PDO). The PDO is transmitted only from one Producer to one or more customer; the data capability of a PDO is included between 1 and 8 bytes.

There are two kinds of PDOs: the first is used for data transmission (TPDO) and the second is used for data reception (RPDO). The PDOs are described by the communication parameters and the mapping parameters. The communication parameters define the communication capability of the PDO; the mapping parameters define the content of PDO.

Data type and mapping of the application objects into a PDO is determined by the default structure specified in the Object Dictionary.

The communication parameter is composed of:

- COB-ID;
- Transmission type;
- Inhibit time;
- Event timer.

COB-ID.

The COB-ID is the Connection Object Identifier and contains the unique CAN message Identifier of the object and additional configuration bits. For the PDOs the following 32 bit COB-ID are foreseen.

TPDO1: NODE ID + 0x00000180;

TPDO2: NODE ID + 0x00000280;

TPDO3: NODE ID + 0x00000380;

TPDO4: NODE ID + 0x00000480;

RPDO1: NODE ID + 0x00000200;

RPDO2: NODE ID + 0x00000300;

RPDO3: NODE ID + 0x00000400;

RPDO4: NODE ID + 0x00000500.

The NODE ID is the CAN node ID of the device. The range value is from 0x01 (decimal 1) up to 0x7F (decimal 127).

If the first byte is 8 the PDO is not used; if it is 0, the PDO is used.

Transmission Type.

To transmit the PDO the following transmission modes can be used:

- Synchronous Transmission
- Asynchronous Transmission

The value of the parameter " Transmission type" defines how the PDO transmission is performed.

For TPDOs:

Value **0**.

The TPDO is synchronous acyclic; it is transmitted after the receiving of a SYNC object when one or more parameters change.

Value **1-240**.

The TPDO is synchronous cyclic. It is transmitted after every *n*th SYNC object within the "Synchronous Window Length" (object 0x1007). The value *n* is the value of the Transmission Type.

NOTE: The Communication Cycle Period object (0x1006) express the time between two SYNC and must have the same value or a bigger value of the Synchronous Window Length.

Value **255**.

The TPDO is asynchronous and it is transmitted in function of the parameter "Event timer" or in function of the variation of a specific event in the device profile.

For RPDOs:

Value **255**.


The RPDO is asynchronous and it is processed by the node as soon as the PDO arrives.

Inhibit Time.

This is the time within the PDO is not transmitted. The PDO is transmitted only when the time expires.

Event Timer.

The PDO is transmitted on a fixed time base.

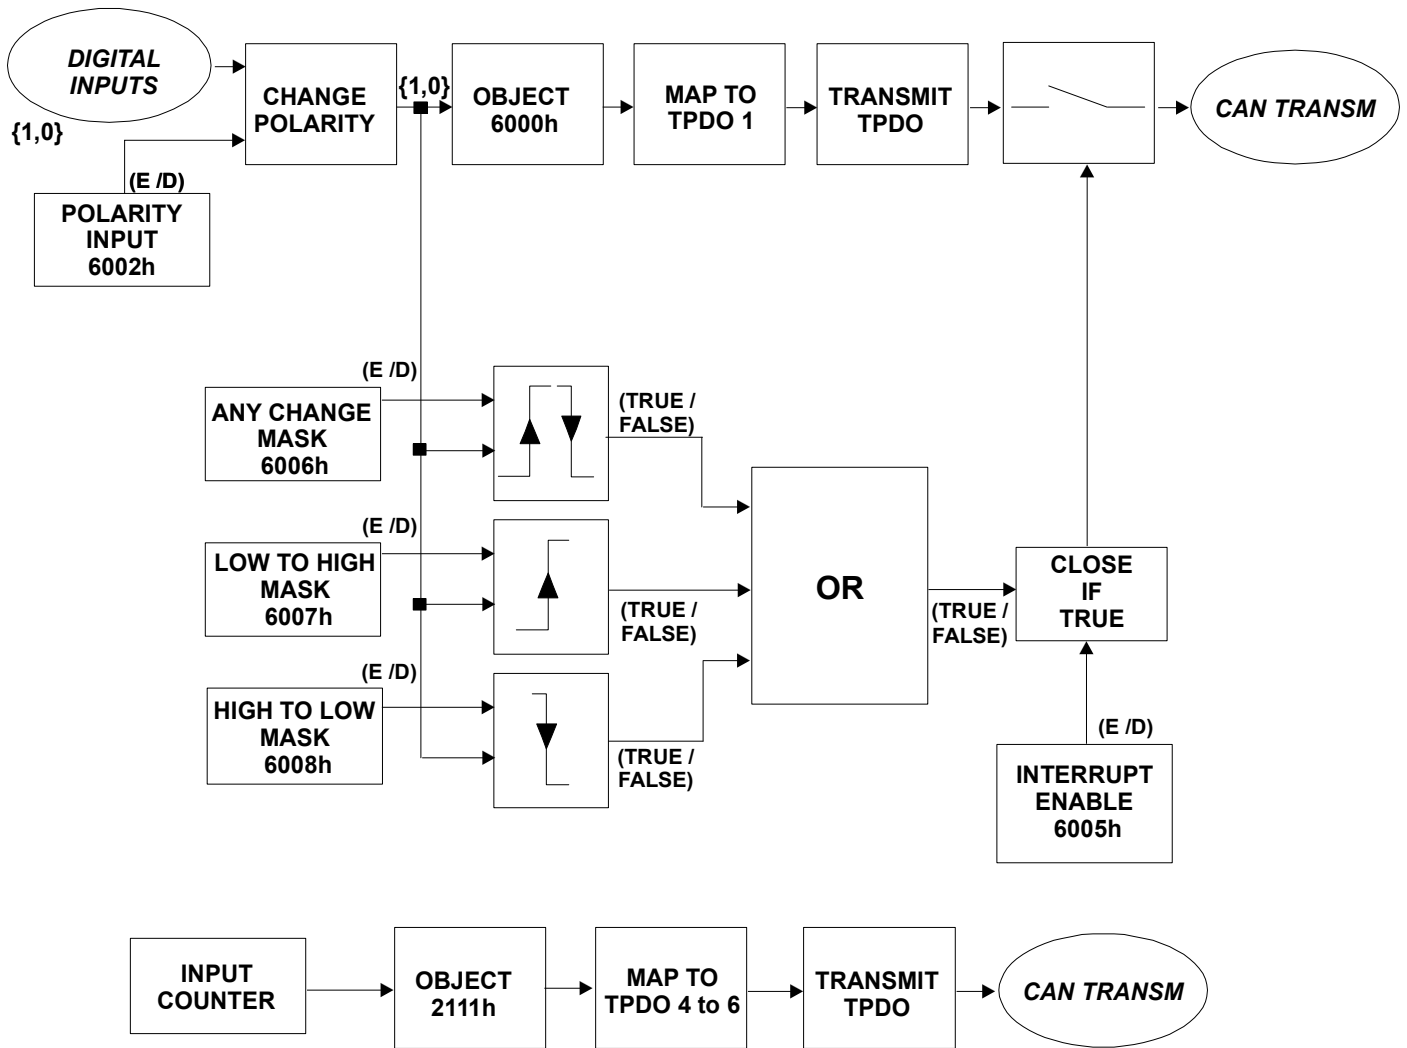

INTERRUPT TRIGGERING TPDO TRANSMISSION.

The digital inputs are processed and transferred to the object 6000h. The data of this object are moved to the 1st TPDO in function of the mapping parameters set in the objects 1A00h. The communication parameters of TPDO are defined in the objects 1800h.


The system executes the boolean operation OR between the values of the masks contained in the objects 6006h (any change mask), 6007h (low to high mask) and 6008h (high to low mask).

If the result of the operation OR is true, the transmission of the TPDO is performed only if the object 6005h has been enabled (value set as 255).

When the digital inputs change to the logic state 1, the associated counter mapped into the object 2111h is incremented.

The data of this object are moved to the TPDOs in function of the mapping parameters set in the objects from 1801h up to 1803h. The communication parameters of TPDOs are defined in the objects from 1A01h up to 1A03h.

To reset the value of the counter write 0 in the SubIndex of the counter selected in the object 2111h.

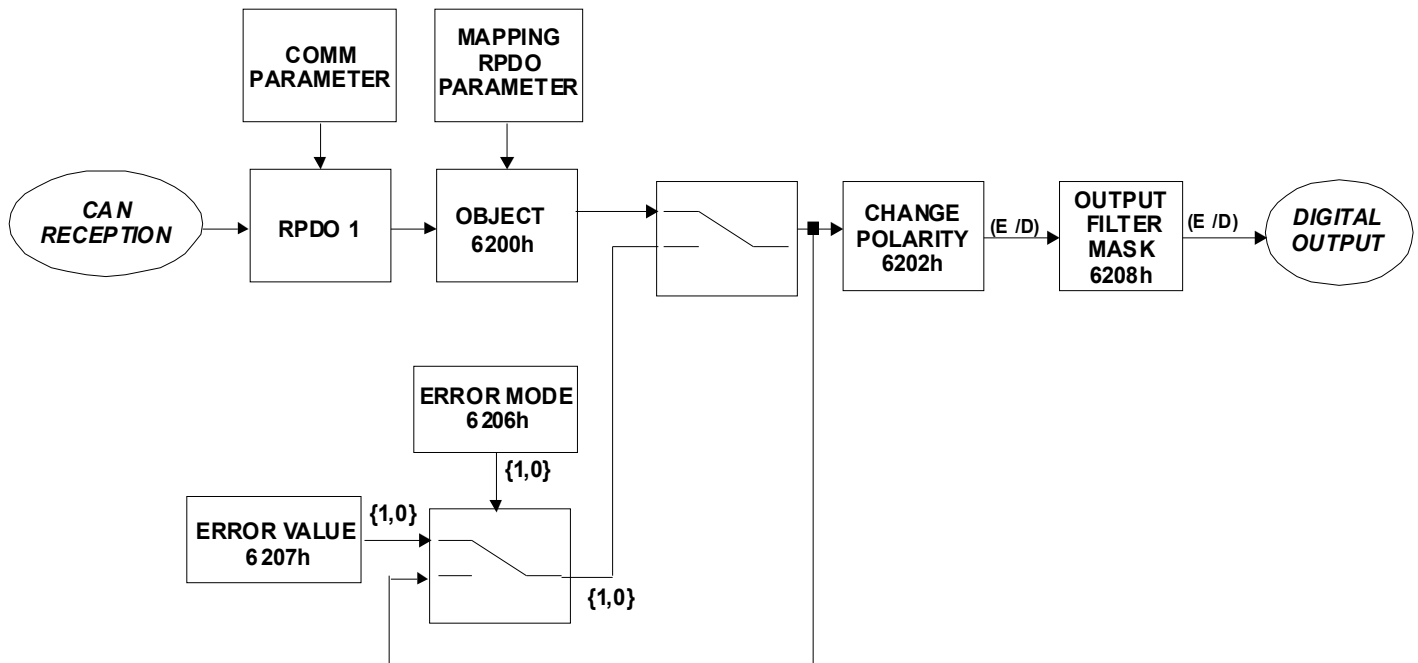

RPDO AND DIGITAL OUTPUTS.

The digital outputs settings coming from the CAN bus are transferred to the 1st RPDO object in function of the mapping parameters set in the object 1600h. The communication parameters of RPDO are defined in the object 1400h. If there are not internal errors the information is processed as defined in the settings of the object 6202h (Change polarity output) and 6208h (Output filter mask) and transferred to the digital outputs of the device.

The device can work in two safe modalities. The behaviour of the device depends on the setting at the power on of the first position of SWB. If OFF the device will work as "Normal Safe Mode", if ON as "Fixed Safe Mode".

Mode "Normal Safe Mode"

If an internal error occurs and if the object 6206h is set as 0 all the output values are set as defined from the object 6207h (Error value); if the object 6206h is set as 255 all the output values are kept. When the device exits from the error condition the outputs will return as originally set in the object 6200h.

Mode "Fixed Safe Mode"

If an internal error occurs and if the object 6206h is set as 0 all the output values are set as defined from the object 6207h (Error value); if the object 6206h is set as 255 all the output values are kept. When the device exits from the error condition the outputs will remain as set in the object 6207h.

To allow the device to set the output safe value it is necessary to set the object "Consumer Time" Subindex 1 or the object Producer Heartbeat Time.

Linking this object to the generation of an Heartbeat by the device or from another node, if the transmission (if Producer) or reception (if Consumer) of this object is missed the outputs will be set as defined in the object 6207h.

Example with object Consumer Heartbeat Time :

Master unit: NodeID 1

Device NodeID 3

Producer Heartbeat time Master : 500 ms (01F4 hex.)

Consumer Heartbeat time device : Node 1, 1000 ms (000103E8 hex.)

Object 6207h = 0 (00 hex) – all the outputs in OFF.

If the Master unit does not send the Heartbeat on the line for 1000 ms, the outputs of the device will be set as defined in the object 6207h.

Example with object Producer Heartbeat Time :

Master unit: NodeID 1

Device NodeID 3

Producer Heartbeat time Master : 500 ms (01F4 hex.)

Object 6207h = 0 (00 hex) – all the outputs in OFF.

If the CAN line of the device is interrupted the outputs of the device will be set as defined in the object 6207h.

Follow the next procedure to set-up the device's operative state at the start up (Operational or Pre-Operational).

“Operational” state setting.

Write the decimal value 0 (0x00) in the object 1F80h (NMT start up).

Execute the command “Save all parameters” as described in the object 1010h.

Execute the command “Restore all parameters” as described in the object 1011h.

Power-off and then power-on again the device.

After this operation the device will always start in Operational.

“Pre-Operational” state setting.

Write the decimal value 4 (0x04) in the object 1F80h (NMT start up).

Execute the command “Save all parameters” as described in the object 1010h.

Execute the command “Restore all parameters” as described in the object 1011h.

Power-off and then power-on again the device.

After this operation the device will always start in Pre-Operational.

As default the device starts up in “Operational”.

DAT7130 OBJECT DICTIONARY

Index	N° Sub-index	Name	Description	Object type	Default value	Access
0x1000	0	Device Type	Identifies the type of device (digital inputs & outputs) and its Device Profile (CiA 401)	Unsigned 32	0x00030191	RO
0x1001	0	Error register	Register used to monitor eventual internal errors	Unsigned 8	0x00	RO
0x1002	0	Manufacturer status register	Status register	Unsigned 32	0x00000000	RO
0x1003	2	Predefined error field	Contains the list of the recent errors	Array	-----	----
	Sub Index 0	Number of errors	Contains the number of errors occurred	Unsigned 8	0x00	RW
	Sub Index 1	Standard error field 1	Stores the recent errors occurred	Unsigned 32	0x00000000	RO
0x1005	0	SYNC COB-ID	Defines the COB-ID of the Synchronism Object consumed	Unsigned 32	0x00000080	R/W
0x1008	0	Manufacturer device name	Contains the device's name	Visible String	"DAT 7130"	RO
0x1009	0	Manufacturer hardware Version	Indicates the hardware version of the device	Visible String	"1.00"	RO
0x100A	0	Manufacturer software Version	Indicates the version of the device's firmware	Visible String	"2.30"	RO
0x1010	2	Store parameters	Supports the saving of the parameters	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub index supported	Unsigned 8	0x01	RO
	Sub Index 1	Save all parameters	Saves all the parameters	Unsigned 32	0x00000000	RW
	Write the value 65766173 Hex, 1702257011 Decimal (ASCII "save") in sub-index to save data.					
0x1011	2	Restore default	Restore the default values of the parameters	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub index supported	Unsigned 8	0x01	RO
	Sub Index 1	Restore all parameters	Restores all the parameters	Unsigned 32	0x00000000	RW
	Write the value 64616F6C Hex, 1684107116 Decimal (ASCII "load") in sub-index to restore data. Type of reset caused at the restore of default: -restore of sub index 1 : Node reset					

Index	N° Sub-index	Name	Description	Object type	Default value	Access
0x1014	0	COB-ID Emergency Object (EMCY)	Defines the COB-ID of the Emergency Object	Unsigned 32	Node ID + 0x80	RW
0x1015	0	Inhibit time (EMCY)	Defines the inhibit time for the Emergency Object (multiple of 100 µs)	Unsigned 32	0x00000000	RW
0x1016	2	Consumer heartbeat time	Defines the heartbeat cycle time (multiple of 1 ms)	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub index supported	Unsigned 8	0x01	RO
	Sub Index 1	Consumer heartbeat time	Heartbeat time	Unsigned 32	0x00000000	RW
0x1017	0	Producer heartbeat time	Defines the heartbeat cycle time (multiple of 1 ms)	Unsigned 16	0x0000	RW
0x1018	5	Identity	Contains the general information about the device	Record	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub index supported	Unsigned 8	0x04	RO
	Sub Index 1	Vendor ID	Datexel s.r.l. Unique code	Unsigned 32	0x000003CD	RO
	Sub Index 2	Product code	DAT7130 ID code	Unsigned 32	0x00000007	RO
	Sub Index 3	Revision number	Revision number	Unsigned 32	0x00000000	RO
	Sub Index 4	Serial number	Serial number code	Unsigned 32	0x00000000	RO
0x1029	2	Error behaviour	Defines the behaviour of the device in case of error encountered	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of error classes	Unsigned 8	0x01	RO
	Sub Index 1	Communication error	Defines the device condition for a communication error	Unsigned 8	0x00	RW
0x1200	3	Server SDO parameters	Describes the SDO communication channel for the node	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x02	RO
	Sub Index 1	COB ID Client to Server (Receive SDO)	Defines the COB ID in case of receiving SDO	Unsigned 32	Node ID + 0x600	RO
	Sub Index 2	COB ID Server to Client (Transmit SDO)	Defines the COB ID in case of transmitting SDO	Unsigned 32	Node ID + 0x580	RO
0x1400	3	1st RPDO communication parameters	List of the parameters of the 1 st RPDO	Record	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x02	RO
	Sub Index 1	COB ID	Defines the COB ID of the PDO	Unsigned 32	Node ID + 0x200	RW
	Sub Index 2	Transmission type	Defines the transmission type for the RPDO	Unsigned 8	0xFF	RW
0x1600	2	1st RPDO mapping parameters	List of mapping parameters of the 1 st RPDO	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x01	RW
	Sub Index 1	Mapped Object 1	Defines the 1 st object mapped into RPDO	Unsigned 32	0x62000108	RW

Index	N° Sub-index	Name	Description	Object type	Default value	Access
0x1800	5	1st TPDO communication parameters	List of the parameters of the 1 st TPDO	Record	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x05	RO
	Sub Index 1	COB ID	Defines the COB ID of the PDO	Unsigned 32	Node ID + 0x180	RW
	Sub Index 2	Transmission type	Defines the transmission type for the TPDO	Unsigned 8	0xFF	RW
	Sub Index 3	Inhibit timer	Defines the delay to transmit the next PDO (multiple of 100 µs)	Unsigned 16	0x0000	RW
	Sub Index 5	Event timer	Transmits the PDO when the timer is expired (multiple of 1 ms)	Unsigned 16	0x0000	RW
0x1801	5	4th TPDO communication parameters	List of the parameters of the 4 th TPDO	Record	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x05	RO
	Sub Index 1	COB ID	Defines the COB ID of the PDO	Unsigned 32	Node ID + 0x280	RW
	Sub Index 2	Transmission type	Defines the transmission type for the TPDO	Unsigned 8	0xFF	RW
	Sub Index 3	Inhibit timer	Defines the delay to transmit the next PDO (multiple of 100 µs)	Unsigned 16	0x0000	RW
	Sub Index 5	Event timer	Transmits the PDO when the timer is expired (multiple of 1 ms)	Unsigned 16	0x0000	RW
0x1802	5	5th TPDO communication parameters	List of the parameters of the 5 th TPDO	Record	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x05	RO
	Sub Index 1	COB ID	Defines the COB ID of the PDO	Unsigned 32	Node ID + 0x380	RW
	Sub Index 2	Transmission type	Defines the transmission type for the TPDO	Unsigned 8	0xFF	RW
	Sub Index 3	Inhibit timer	Defines the delay to transmit the next PDO (multiple of 100 µs)	Unsigned 16	0x0000	RW
	Sub Index 5	Event timer	Transmits the PDO when the timer is expired (multiple of 1 ms)	Unsigned 16	0x0000	RW
0x1803	5	6th TPDO communication parameters	List of the parameters of the 6 th TPDO	Record	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x05	RO
	Sub Index 1	COB ID	Defines the COB ID of the PDO	Unsigned 32	Node ID + 0x480	RW
	Sub Index 2	Transmission type	Defines the transmission type for the TPDO	Unsigned 8	0xFF	RW
	Sub Index 3	Inhibit timer	Defines the delay to transmit the next PDO (multiple of 100 µs)	Unsigned 16	0x0000	RW
	Sub Index 5	Event timer	Transmits the PDO when the timer is expired (multiple of 1 ms)	Unsigned 16	0x0000	RW
0x1A00	2	1st TPDO mapping parameters	List of mapped parameters of the 1 st TPDO	Array	-----	----
	Sub Index 0	Number of mapped objects	Contains the number of sub-index supported	Unsigned 8	0x01	RW
	Sub Index 1	Mapped Object 1	Defines the 1 st object mapped into TPDO	Unsigned 32	0x60000108	RW

Index	N° Sub-index	Name	Description	Object type	Default value	Access
0x1A01	3	4 th TPDO mapping parameters	List of mapped parameters of the 4 th TPDO	Array	-----	----
	Sub Index 0	Number of mapped objects	Contains the number of sub-index supported	Unsigned 8	0x02	RW
	Sub Index 1	Mapped Object 1	Defines the 1 st object mapped into TPDO	Unsigned 32	0x21110120	RW
	Sub Index 2	Mapped Object 2	Defines the 2 nd object mapped into TPDO	Unsigned 32	0x21110220	RW
0x1A02	3	5 th TPDO mapping parameters	List of mapped parameters of the 5 th TPDO	Array	-----	----
	Sub Index 0	Number of mapped objects	Contains the number of sub-index supported	Unsigned 8	0x02	RW
	Sub Index 1	Mapped Object 1	Defines the 1 st object mapped into TPDO	Unsigned 32	0x21110320	RW
	Sub Index 2	Mapped Object 2	Defines the 2 nd object mapped into TPDO	Unsigned 32	0x21110420	RW
0x1A03	3	6 th TPDO mapping parameters	List of mapped parameters of the 6 th TPDO	Array	-----	----
	Sub Index 0	Number of mapped objects	Contains the number of sub-index supported	Unsigned 8	0x02	RW
	Sub Index 1	Mapped Object 1	Defines the 1 st object mapped into TPDO	Unsigned 32	0x21110520	RW
	Sub Index 2	Mapped Object 2	Defines the 2 nd object mapped into TPDO	Unsigned 32	0x21110620	RW
0x1F80	0	NMT Startup	Defines the operative state of the device at the startup	Unsigned 32	0x00000000	RW
	Value available: Dec. 0 = Device in Operational. Dec. 4 = Device in Pre-Operational					
0x2101	0	Can Node ID	Defines which is the default CAN node number of the device	Unsigned 8	0x7F	RO
	Values available: from Dec.1 (0x01) up to Dec 127 (0x7F). The values are programmable only from dip switch.					
0x2102	0	Can bit rate	Defines which is the default bit rate value	Unsigned 8	0x03	RO
	Decimal and Hex value to select the Bit rate parameter. The values are programmable only from dip switch.					
		Bit rate	Value (Dec)	Value (Hex)		
		10 Kbps	0	0x00		
		20 Kbps	1	0x01		
		50 Kbps	2	0x02		
		125 Kbps	3	0x03		
		250 Kbps	4	0x04		
		500 Kbps	5	0x05		
		800 Kbps	6	0x06		
	1 Mbps	7	0x07			
0x2111	9	Input Counter Value	Contains the value of 8 input counter available	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x08	RO
	Sub Index 1	Input 1 counter	Contains the value of the counter associated to the digital input 1	Unsigned 32	0x00000000	RO
	Sub Index 2	Input 2 counter	Contains the value of the counter associated to the digital input 2	Unsigned 32	0x00000000	RO
	Sub Index 3	Input 3 counter	Contains the value of the counter associated to the digital input 3	Unsigned 32	0x00000000	RO
	Sub Index 4	Input 4 counter	Contains the value of the counter associated to the digital input 4	Unsigned 32	0x00000000	RO
	Sub Index 5	Input 5 counter	Contains the value of the counter associated to the digital input 5	Unsigned 32	0x00000000	RO
	Sub Index 6	Input 6 counter	Contains the value of the counter associated to the digital input 6	Unsigned 32	0x00000000	RO
	Sub Index 7	Input 7 counter	Contains the value of the counter associated to the digital input 7	Unsigned 32	0x00000000	RO
	Sub Index 8	Input 8 counter	Contains the value of the counter associated to the digital input 8	Unsigned 32	0x00000000	RO

Index	N° Sub-index	Name	Description	Object type	Default value	Access
0x6000	2	Read Input 8 bit	Contains the measure of the Digital Input Channels	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x01	RO
	Sub Index 1	Digital Inputs 1 to 8	Digital input channel measure	Unsigned 8	0x00	RO
0x6002	2	Polarity Input 8 bit	Contains the settings of the polarity of each single input bit	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x01	RO
	Sub Index 1	Polarity bit 1 to 8	Digital input polarity settings 0=input not inverted; 1=input inverted	Unsigned 8	0x00	RW
0x6005	0	Global Interrupt Enable Digital	Allows to enable / disable the global interrupt behaviour 0 = global interrupt disabled 255= global interrupt enabled	Unsigned 8	255	RW
0x6006	2	Interrupt Mask Any Change 8 bit	Defines which input port shall activate an interrupt on positive / negative edge detection	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x01	RO
	Sub Index 1	Mask bit 1 to 8	Mask bit settings 0=interrupt disable; 1=interrupt enabled	Unsigned 8	0xFF	RW
0x6007	2	Interrupt Mask Low-to-High 8 bit	Defines which input port shall activate an interrupt on positive edge detection	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x01	RO
	Sub Index 1	Mask bit 1 to 8	Mask bit settings 0=interrupt disable; 1=interrupt enabled	Unsigned 8	0x00	RW
0x6008	2	Interrupt Mask High-to-Low 8 bit	Defines which input port shall activate an interrupt on negative edge detection	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x01	RO
	Sub Index 1	Mask bit 1 to 8	Mask bit settings 0=interrupt disable; 1=interrupt enabled	Unsigned 8	0x00	RW
0x6200	2	Write Output bits	Contains the programming for the digital outputs bits	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x01	RO
	Sub Index 1	Digital Outputs 1 to 4	Digital output programming	Unsigned 8	0x00	RWW
0x6202	2	Change Polarity Output bits	Contains the settings of the polarity of each single output bit	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x01	RO
	Sub Index 1	Polarity outputs 1 to 4	Digital outputs polarity settings 0=output not inverted; 1=output inverted	Unsigned 8	0x00	RW
0x6206	2	Error mode outputs 8 bits	Defines the condition of each output bit when an internal error occurs	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x01	RO
	Sub Index 1	Error mode outputs 1 to 4	Digital output condition 0=output value set as defined in object 6207 1=output value kept	Unsigned 8	0xFF	RW
0x6207	2	Error value outputs 8 bits	Defines the value of each output bit when an internal error occurs	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x01	RO
	Sub Index 1	Error value outputs 1 to 4	Digital output value 0 = output value set to 0 1 = output value set to 1	Unsigned 8	0x00	RW
0x6208	2	Filter Mask outputs 8 bits	Defines which output port will be set to the received out value	Array	-----	----
	Sub Index 0	Max sub-index number	Contains the number of sub-index supported	Unsigned 8	0x01	RO
	Sub Index 1	Mask outputs 1 to 4	Digital output enabled	Unsigned 8	0xFF	RW

